ARSTYL® WALL TILES

Installation instructions



walltiles.arstyl.com



VARIED INSTALLATION

ARSTYL® WALL TILES allow varied and creative wall installation options.

CORAL

The reference Coral can be combined in any order; all 6 sides fit accurately.

WING

The reference Wing can be combined alternately horizontally and vertically.


RAY

The reference Ray is perfectly symmetric and can be combined in different ways.

EXAMPLES



EXAMPLES

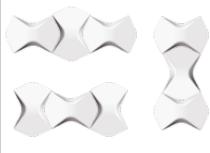


EXAMPLES










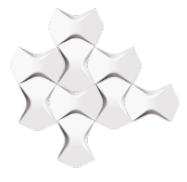






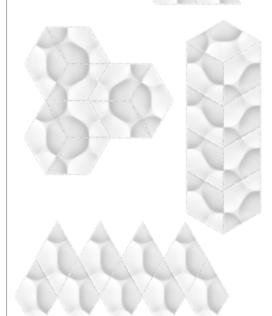



INSTALLATION INSTRUCTIONS

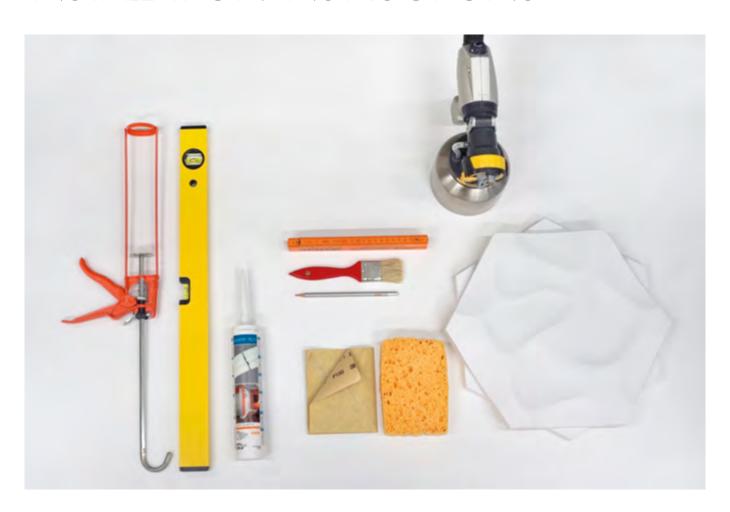

MATERIALS REQUIRED

- Sandpaper grit 150 or finer
- Brush/sponge
- Spirit level
- Ruler and pencil
- Nail clamps or nails; wood strip, if necessary
- Hammer
- ADEFIX® PLUS assembly adhesive
- Cartridge applicator
- Finish coat
- Painting tools

OPTIONAL (for installation on a complete wall, page 6)

- ADEFIX® adhesive filler (ceiling/wall grouting)
- HDPS/PU saw
- Alignment beams

FITTING AND STORAGE CONDITIONS

ARSTYL® WALL TILES must be stored flat in a dry place. The recommended temperature is +15 °C to +25°C with a relative humidity of 45% to 65%. To achieve optimum results, the products should be fitted under similar moisture and temperature conditions as present after the installation (indoor environment). Fitting on a wet backing surface (fresh plaster) and in forced drying conditions (heat gun, dehumidifier, exceptionally high temperature) are to be ruled out.

Check the products and substrates for suitability. The following backing surfaces are suitable: indoor plastered or papered surfaces, coated plaster. Surfaces must be clean, dry, free from dust, degreased and flat; rough down if necessary. If the product is to be applied to particular backing surfaces, please consult our technical department.

PREPARATION & FINISH COATING



Prepare the ARSTYL® WALL TILES, lightly sand edges if necessary with sandpaper grit 150 or finer (breaks). Wipe edges and panel surface with a damp sponge and dry.



Apply the top coat of paint.

NOTE:

Suitable top coats include water-based emulsion paints, acrylic or PU-based emulsion paints. It is always recommended to perform a test coat. Follow the paint manufacturer's instructions.

Begin the installation after drying.

INSTALLATION



Measure the wall and establish the position of the ARSTYL $^{\circ}$ WALL TILES.



Set out the lower laying line using a spirit level.



Clamp the adhesive cartridge, cut cartridge nozzle (diameter 5-8 mm).



Apply a continuous line (bead) of ADEFIX $^{\scriptsize \circ}$ PLUS mounting adhesive to the rear mounting surfaces.



Position the ARSTYL $^{\mbox{\tiny \$}}$ WALL TILES and embed them in the adhesive.



Butt-join the ARSTYL® WALL TILES.



NOTE: Butt joint areas must not be glued or grouted.





OPTIONAL: INSTALLATION ON A COMPLETE WALL

For a complete wall design with ARSTYL® WALL TILES, the following instructions should be aditionally taken into









Measure the wall and establish the position of the ARSTYL® WALL TILES. Set out the lower laying line using a spirit level.

NOTE:

We recommend starting the installation in the middle of the wall, so that the ARSTYL® WALL TILES can later be trimmed to fit where the walls and ceiling meet.

Measure the size of the ARSTYL® WALL TILES to be trimmed in the wall and ceiling connection area and transfer to the back.

Cut the ARSTYL® WALL TILES to fit with hand saw and set beam.







Professionally grout the ceiling and wall connection area with ADEFIX [®] adhesive filler if necessary.

The back of the ARSTYL® WALL TILES is uneven and has cavities. If an element is mounted such that a cut-side remains visible, it can be smoothly filled with ADEFIX® PLUS and ADEFIX®. In this case, make sure that the upper surface levelling coat is made only with ADEFIX®.











